



POWER PLAY

Instructions

To Turn On/Off Power Play's Intense Vibrations:

Locate raised button at the base of Power Play between the two metal charging contacts. Press and hold button for approximately 3 seconds until Power Play begins vibrating. Press and hold again to power off.

To Change the Vibration Pattern:

Press raised button at the base of Power Play without holding.

To Charge Power Play:

Plug charger into a USB power source and touch the metal charging contacts of Power Play and the heart-shaped magnetic charger together. Charger displays a flashing light while properly connected and charging, and a solid light when charging is complete.

To Clean and Maintain Power Play:

To clean, spray with Doc Johnson® Toy Cleaner or wash with a mild soap and warm water. Allow to dry completely before storing separately from other toys in a cool, dry place. Use with water-based lubricant/glide. *Doc Johnson® Toy Cleaner sold separately.