


# Battery Installation


Uses 3 x LR44 Button Cell Batteries

- Press once to switch on the device
- Press again to change rhythms
- Hold the button to switch off the device

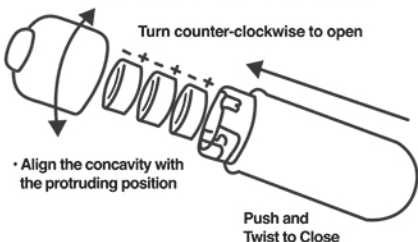

## Warning!

Removal of plastic indicator sheet will result in malfunction

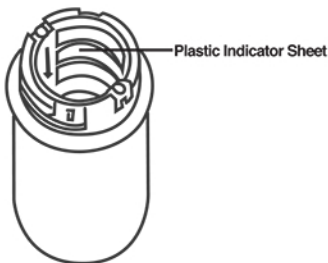

### 10 DYNAMIC RHYTHMS

1. Vibrate (low)

2. Vibrate (medium)

3. Vibrate (high)

4. Gradient Burst



5. Intermittent



6. Surge



7. Intra-Surge



8. Even Step



9. Roller Coaster Spurt



10. Pulsate



#### Warning:

Secure cap closing tightly during cleaning and while in use with water.

Do not submerge. This product cannot provide water resistance in bath or in the pool. Waterproof can only be provided when in the shower or while it is being cleaned with water.

#### Warning: To Avoid Battery Leakage

- Be sure to insert the batteries in correct polarity and follow the manufacturer's product and battery instructions.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Always remove weak or dead batteries from the product.
- Non-rechargeable batteries are not to be recharged.
- The supply terminals are not to be short-circuited.
- Retain packaging and instructions for future reference.
- Remove batteries from your product after every session to preserve battery life.