

# MAIN SQUEEZE™ Warming Accessory Instructions

The Main Squeeze™ Warming Accessory is compatible with all Doc Johnson ULTRASKYN™ strokers.

Before using the Main Squeeze™ Warming Accessory, ensure that your ULTRASKYN™ stroker is clean, dry, and properly assembled for use. Failure to do so may damage your Warming Accessory and/or stroker.

Insert Warming Accessory into the opening of your stroker and plug into any USB power source. LED indicator lights up when Warming Accessory is powered on.

Warming Accessory heats to body temperature in 5-8 minutes and may remain inserted into your stroker until the ULTRASKYN™ interior has warmed to your desired level.

Remove Warming Accessory before using your **stroker**.

## Care & Maintenance

**Disconnect from power source when not in use. Do not use Warming Accessory in or near water. Do not leave unattended.**


To clean, spray lightly with Main Squeeze™ Toy Cleaner or wipe with a damp (not wet) cloth using mild soap and warm water. Do not hold under running water. Do not submerge. Allow to dry completely before storing separately from other toys in a cool, dry place.

\*Main Squeeze™ Toy Cleaner sold separately.

**USB Plug**



← cord length: 29.5" / 74.93 cm →

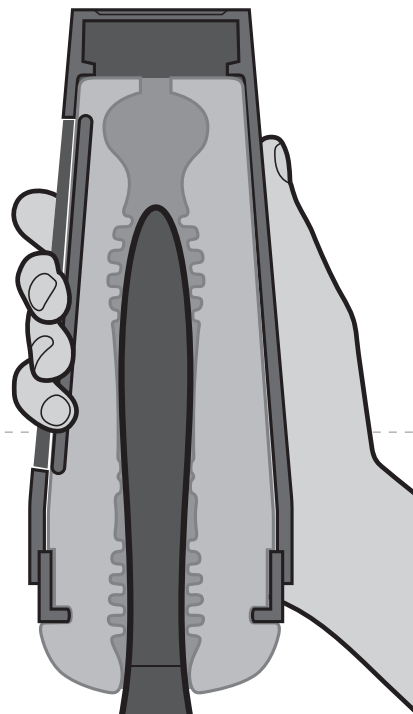

**LED indicator**